

PRILOTTE PORTABLE Air compressor

1. **Connect the hose:** Attach the air hose to the tire valve. If it's a screw-on type, ensure the valve is closed before connecting.
2. **Turn on the pump:** Press and hold the power button (center round button) until the unit turns on.
3. **Select the mode:** Use the mode button to select the correct setting (e.g., "car," "bike," "ball").
4. **Set the target pressure:** Use the pressure increase (+) and decrease (-) buttons to set the desired pressure (e.g., PSI, bar). Make sure the units are **PSI**-the right control button marked "U" changes the units.
5. **Start inflating:** Press the power button (center button) to begin the inflation process. The pump will run until it reaches the set pressure and will then stop automatically.
6. **Disconnect the hose:** Once inflation is complete, disconnect the hose from the tire valve. **Please store the unit back in it's protective sleeve in the appropriate container to protect it for future use.**
7. **Replace the valve cap:** Put the valve cap back on the tire valve to protect it from dirt and debris.
8. **The units can be recharged :** USB to USB-C cords to the "input" jack can be used to charge the units in a short period of time.

Recommended tire pressures:

	ARCHER	DAKOTA	TRINIDAD
nose gear tire pressure (psi)	24	29	49
main tire pressure (psi)	28	35	63